

BLICKMAN



Hampers

For elimination of dirty linens

Includes:


- Round Hampers
- Square Hampers
- Space Saver Hamper
- Hamper Bags



THE BLICKMAN DIFFERENCE

- Our hampers facilitate easy and safe disposal of contaminated linens. They all move easily over floors on 2" or 3" casters. Our hampers have proven to be stable when empty or full due to their wide bases and added counterweights on covered models. A bottom brace holds and protects the hamper bag from contact with the floor.
- Our hampers come in either chrome or stainless steel and we offer different shapes and sizes to fit your needs and floor plans. Additionally, we offer covered models to control airborne pathogens. All covered hampers are foot-operated to help prevent cross contamination.
- For MR conditional environments, we offer two MR conditional models: one covered and one uncovered, for your choosing.
- We offer two optional hamper bags, nylon and water soluble, that fit our round hampers.

Key Product Features

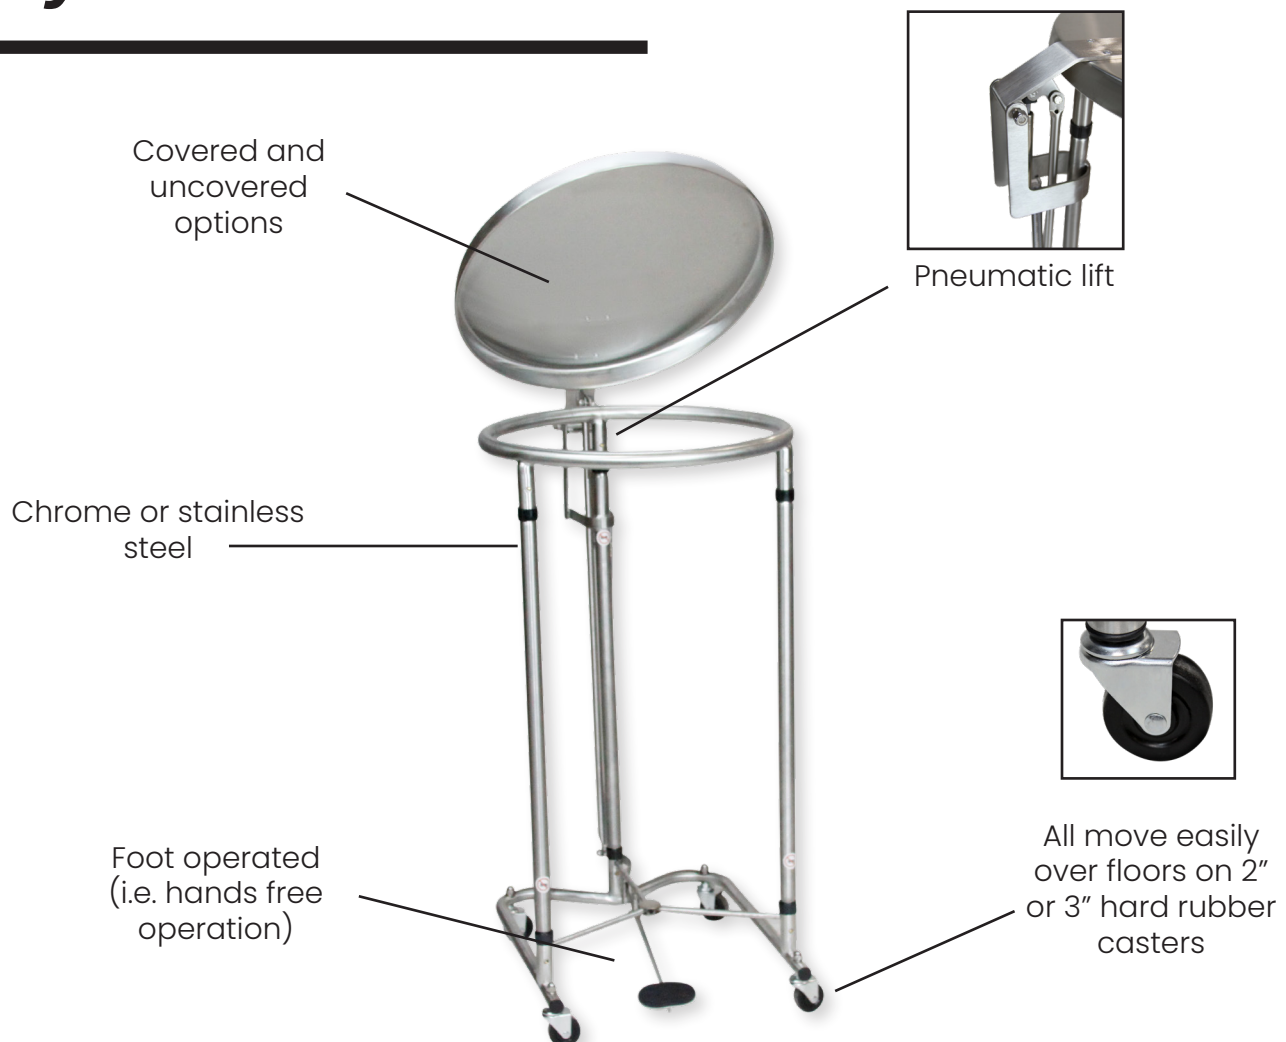


Hampers

Round

ROUND HAMPERS

Description: We offer covered and uncovered round hampers in both stainless steel and chrome. They are 35" tall and roll on 2" hard rubber swivel casters. They come in two sizes 18" diameter and 25" diameter. The covered models operate via a spring-loaded lift mechanism that opens and closes the stainless steel lid. The pneumatic top allows for pin drop quiet operation.

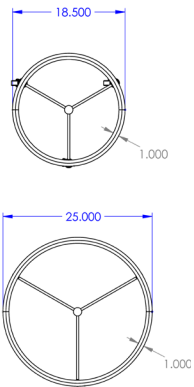

Name	Uncovered		Covered	
	Chrome	Stainless Steel	Chrome	Stainless Steel
Lid				
Bag Size	18"			
Model #	2018	7774SS	2118	7774SS-LF
Item #	0962018000	0927774000	096211800P	092777420P
Shipping Weight	11 lbs.	11 lbs.	21 lbs.	25 lbs.
Bag Size	25"			
Model #	2025	8773SS	N/A	8773SS-LF
Item #	0962025000	0928773000	N/A	092877320P
Shipping Weight	12 lbs.	13 lbs.	N/A	35 lbs.

Hamper Bags: 18" and 25" white nylon hamper bags and water soluble hamper bags

MR options available, see MR section for more details.



Hampers

Square

FOLDING ADJUSTABLE HAMPER

Description: Our folding chrome hamper adjusts to accommodate three hamper bag sizes with a bottom frame to support hamper bags. Travels on 2" hard rubber swivel casters.



Dimensions:

- **18" bag size:** 19" x 36 1/2" x 18"
- **22" bag size:** 19" x 40 1/2" x 22"
- **25" bag size:** 19" x 42 1/4" x 25"

Name	Folding Adjustable Hamper
Model #	2230
Item #	0962230000
Shipping Weight	18 lbs.

SECURE CARE HAMPER

Description: Our secure care chrome hamper supports 36 - 42 gallon multipurpose bags. Its' polycoated steel lid opens using foot operated lift mechanism. Includes hamper storage pouch. Travels on 3" hard rubber swivels casters.



Dimensions:

- 18 5/8" x 37 3/4" x 19 1/2"

Name	Secure Care Hamper
Model #	2010
Item #	0962010000
Shipping Weight	26 lbs.

Hampers

Triangular

SPACE SAVER HAMPER

Description: Our space saver hamper offers hands free loading and unloading with a convenient non-slip foot pedal. Sturdy all stainless steel construction with bumper guards on lid and legs to protect equipment and walls. The solid bottom shelf provides extra security for heavy loads and a spring-loaded lift mechanism provides a pin-drop pneumatic top for quiet operation. Travels on 3" hard rubber swivel casters.



Name	Space Saver Hamper
Model #	230ISS
Item #	096230100P
Shipping Weight	24 lbs.

Hampers

Accessories

HAMPER BAGS



**Disposable Water Soluble
Plastic Hamper Bag**



**Reusable
Nylon Hamper Bag**



**Secure Care
Hamper Pouch**

Part #	Description	Shipping Weight
98390000WS	100 Plastic Water Soluble Hamper Bags	9 lbs.
9839777201	Bag, 18" Diameter Ring Hamper Nylon White	1 lb.
9839777302	Bag, 25" Diameter Ring Hamper Nylon White	1 lb.
0962012000	Secure Care Hamper Pouch for Labels	1 lb.

Hampers

Construction
Specifications

Construction Specifications

Universal Dimensions	Hamper Bag Sizes: 18", 22", 25", 26"
Materials	304 stainless steel Chrome
Gauge	Stainless Steel: 1" diameter, 18GA tubing Chrome: 1" diameter tubing
Welding	All welding by heliarc method and exposed welds are ground smooth
Finish	Exposed surfaces are free from pit marks, weld seams, scale and are polished with #4 polish to a satin finish
Casters	2" & 3" hard rubber swivel casters (some with locks)
Notes	<ul style="list-style-type: none">MR conditional hampers available where indicated

Shipping Information

All shipping weights are estimates and may be changed without prior notice. Specifications may be improved and dimensions changed without prior notice. Please contact customer service for estimated shipping costs at info@blickman.com.

Toll Free: (800) 247-5070
Local: (973) 330-0557

BLICKMAN

www.blickman.com
info@blickman.com

1099 Wall Street West, Suite 250A, Lyndhurst, NJ 07071